

Television: Opening Banner that says to Press Menu every time you turn your TV ON

To remove the opening banner:

On the Remote:

Push the "Menu" button on the Remote

Go to 'Settings'

Go to 'System'

Go to 'Media Client Settings'

Go to 'Auto Power'

Choose 'Off'

Press 'OK' button on the Remote

Press 'Exit' button on the Remote