

Television and Music Channels Operating Instructions

updated May 24, 2018

Using the Remote – (there is a complete guide to using the remote – see postings)

• Press the **Power On** button; both TV and HD box are turned on. One of two MODEs is possible: **television viewing mode** OR **music playing mode**. If both MODE and channel number are what you want, OK.

• If one wishes to change the MODE or TV channel, see below:

A. If **television viewing mode** is on, press *keypad* numbers to get the desired TV viewing channel. The desired **television viewing** channel is activated.

B. To change from Television viewing to the Music playing mode:

1. Press *keypad numbers* to get the desired **Music channel**. (For example, Easy Listening 1847) The music playing option is activated.
2. Screen shows message, "Loading." Wait awhile. Music stops and screen shows "Music Choice" Wait. Music starts again with desired music with a small square in the lower right and menu strip on the top of the screen.
3. To get music information on a **full** screen, press the down button; *two lines* are added to the *small square* on the screen. Press the OK button; a full-screen appears.

C. If **music playing mode** is on, and *one desires to change to ANOTHER music channel*: *Works if music is on full screen. See note below.*

1. Press exit button **twice***, screen keeps playing the first music and gives a screen message of *loading* on the screen.
2. When loading stops, the screen shows *MUSIC Choice advertisement*, music stops and is followed by a picture with a *small square symbol* in the lower right and a menu strip on the top of the screen.
3. Go to Step B1. above.

Note: If screen is not on "full screen", the outcome seems erratic. Screen message, "More FIOS Channels" appears. Press FIOS TV button to continue.

D. If **music playing mode** is on, and one desires to change to a **television viewing channel**:

1. Press exit button **twice***, screen keeps playing the first music and gives a screen message of *loading* on the screen.
2. When loading completed, press *keyboard* number to get the desired TV viewing channel. The desired **television viewing** channel is activate

* Press once; screen message appears with option, "Press again to leave"; press again.